

LESSON 23 AN/FCC-100(V)7 & 9X PROGRAMMING PORT 7
FOREIGN EXCHANGE OFFICE (FXO) LD-CELP 16 KBS
CONFIGURATION
EXAMPLE OF A COMMERCIAL DCO CONNECTION

STEP	OPERATOR ACTION	MESSAGE DISPLAYED	SELECT
1	Press the RESTART key.		
2	Press the NEXT ENTRY P key.	ACTIVATE	
3	Press the NEXT ENTRY P key.	EXAMINE	
4	Press the NEXT ENTRY P key. (Select CONFIGURE using the DOWN ⤵ arrow key).	CONFIGURE	CONFIGURE
5	Select OFFLINE using the DOWN ⤵ arrow key.	OFFLINE	OFFLINE
6	Select A-CONFIG using the DOWN ⤵ arrow key.	A-CONFIG	A-CONFIG
7	If selection displayed is not PORT 7 , then scroll through the options by pressing the NEXT ENTRY P key until PORT 7 is displayed. (Select PORT 7 using the DOWN ⤵ arrow key).	SYSTEM PORT 7	PORT 7
8	If selection displayed is not FXO (DPT) , then scroll through the options by pressing the NEXT ENTRY P key until FXO (DPT) is displayed. (Select FXO (DPT) using the DOWN ⤵ arrow key).	FXO (DPT)	FXO (DPT)
9	If selection displayed is not LD-CELP then scroll through the options by pressing the NEXT ENTRY P key until LD-CELP is displayed. (Select LD-CELP using the DOWN ⤵ arrow key).	XXX PCM CELP STU-III LD-CELP UNUSED	LD-CELP
10	If selection displayed is not 16K then scroll through the options by pressing the NEXT ENTRY P key until 16K is displayed. (Select 16K using the DOWN ⤵ arrow key).	XXX 12.8K 14.4K 16K	16K

**LESSON 23 AN/FCC-100(V)7 & 9X PROGRAMMING PORT 7
FOREIGN EXCHANGE OFFICE (FXO) LD-CELP 16 KBS
CONFIGURATION**

EXAMPLE OF A COMMERCIAL DCO CONNECTION

STEP	OPERATOR ACTION	MESSAGE DISPLAYED	SELECT
11	If selection displayed is not MBW-DISABLED then scroll through the options by pressing the NEXT ENTRY P key until MBW-DISABLED is displayed. (Select MBW-DISABLED using the DOWN B arrow key).	MBW-DISABLED MBW-ENABLED	MBW-DISABLED
12	If selection displayed is not ADAPTIVE then scroll through the options by pressing the NEXT ENTRY P key until ADAPTIVE is displayed. (Select ADAPTIVE using the DOWN B arrow key).	XXX FIXED ADAPTIVE	ADAPTIVE
13	If selection displayed is not 600-OHMS then scroll through the options by pressing the NEXT ENTRY P key until 600-OHMS is displayed. (Select 600-OHMS using the DOWN B arrow key).	XXX 900 OHMS 600 OHMS	600 OHMS
14	If selection displayed is not TX-TLP +02.0 then scroll through the options by pressing the NEXT ENTRY P key until TX-TLP +02.0 is displayed. (Select TX-TLP +02.0 using the DOWN B arrow key).	TX TLP -03.0 TO TX TLP +11.0	TX-TLP +02.0
15	If selection displayed is not RX-TLP +01.0 then scroll through the options by pressing the NEXT ENTRY P key until RX-TLP +01.0 is displayed. (Select RX-TLP +01.0 using the DOWN B arrow key).	RX TLP +03.0 TO RX TLP -11.0	RX-TLP +01.0
16	If selection displayed is not LOOP-START then scroll through the options by pressing the NEXT ENTRY P key until LOOP-START is	GROUND START DID-IMM-ST DID-WINK-ST PLAR	LOOP-START

**LESSON 23 AN/FCC-100(V)7 & 9X PROGRAMMING PORT 7
FOREIGN EXCHANGE OFFICE (FXO) LD-CELP 16 KBS
CONFIGURATION**

EXAMPLE OF A COMMERCIAL DCO CONNECTION

	displayed. (Select LOOP-START using the DOWN arrow key).	LOOP-START	
17	Press the STORE key to "save" this FXO (DPT) PORT 7 CONFIGURATION into the OFFLINE A-CONFIG memory.	FXO (DPT)	

END OF AN/FCC-100(V)7 & 9X PORT 7 FXO LD-CELP

16KBS CONFIGURATION

EXAMPLE OF A COMMERCIAL DCO CONNECTION